

Considerations Before Film Installation

This guide is intended to provide installers with 3M's recommendations on how to inspect, prepare, and clean a vehicle prior to applying a car wrap film. Each section focuses on specific global techniques and best practices used to help installers achieve more successful installations. Follow all installation safety standards for your respective country. Installers should wear proper personal protection equipment (PPE) as defined by the facility and as recommended by the products used.

Table of Contents Facility Requirements Installation Day Cleaning Vehicle Inspection and Drop Off Additional Prep Considerations Vehicle Preparation and Cleaning Important Documents



Health and Safety

This information is applicable to many of the procedures in this Bulletin. Please read and follow them.

CAUTION: When handling any chemical products, be sure to read the manufacturers' container labels and Safety Data Sheet (SDS) for important health, safety and environmental information. To obtain SDS sheets for 3M products go to <u>3M.com/SDS</u>, or by mail or in case of emergency, call 1-800-364-3577 or 1-651-737-6501.

To avoid exposure to potentially hazardous materials, which if not avoided can cause serious bodily harm, wear appropriate Personal Protective Equipment (PPE) as recommended by the product manufacturer, or as deemed necessary based on the results of an exposure assessment. Such PPE may include impervious gloves (for example, butyl rubber gloves) and eye protection such as safety glasses or goggles.

When using any equipment, always follow the manufacturers' instructions for safe operation. Any activity performed for a long period of time in an awkward position or with a high amount of force is potentially a risk for causing musculoskeletal strain, pain or injury. When applying or removing graphics, follow these practices to improve comfort and avoid injury:

- Alternate your tasks during the application.
- Schedule regular breaks.
- Perform stretches or do exercises to improve circulation.
- Avoid awkward reaching.

Facility Requirements



Operating Conditions

Location



Well-lit, clean, and dry indoor environment, away from any ventilation and entrances, and away from any equipment that may contaminate the vehicle surface.

Temperature



10°C to 38°C (50°F to 100.4°F)

For specific installation temperatures, reference the product bulletins for the graphics being used.

Materials and Tools

Detergent and water solution



Scotch-Brite® High Performance Cloth or lint-free cloth



3M™ Perfect-It™ Clay Bar



Vehicle cleaning sponge



3M[™] Hand Applicator PA1-G Gold Squeegee



Grounding cable



Compressed air



Appropriate personal protection equipment



Tire covers



Spray bottle



Preparatory solvent



Vacuum



70% isopropyl alcohol (IPA) and 30% water mixture



3M™ Perfect-It™ Clean and Shine







1 – 3

Completed

Operating Steps 1 – 3

1



Vehicle Inspection

Inspect the vehicle with the customer to identify rust, paint quality issues, scratches, dents, and other damage that may affect film installation.

A checklist may be helpful to reference during this inspection.





2



Clean the Vehicle

Clean the entire vehicle surface with soap and warm water prior to bringing the vehicle inside.

Note: Customers' cars should arrive clean and free from gross contaminants. Regardless, installers should *also* clean the vehicle themselves.

3



Bring the Vehicle Inside

Move the vehicle into an environmentally controlled workshop. Place it away from any air vents or entrances, and away from any equipment that may contaminate the vehicle surface.

Always follow safety regulations. See page 1

Vehicle Preparation and Cleaning

1-4

5-7

Completed

Operating Steps 1 – 4

1



Clean the Vehicle

Clean the entire vehicle, removing any gross debris such as leaves and sticks.

2



Apply Compressed Air

Apply compressed air to remove moisture and dust from all confined or tight spaces on the vehicle, such as head lights and body panel lines. It is preferable to conduct this cleaning outside when possible to avoid further contaminating the shop.

3




Clean the Wheels

Clean each of the vehicle's wheels and wheel wells with clean, lint-free microfiber cloths and a mixture of 70% isopropyl alcohol and 30% water.

Replace the cloths as they become dirty.



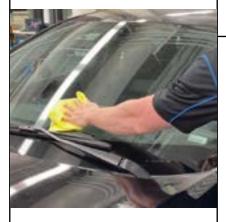

Clean the Vehicle Near Wrap Areas

Use clean lint-free microfiber cloths and a mixture of 70% isopropyl alcohol and 30% water to clean anywhere on the vehicle that is near the wrap area. This includes areas such as the windshield, wipers, the edges of the hood, trunk, doors, and door jambs. Additionally wrap a microfiber cloth with IPA around a squeegee to clean the gaps along molding and seals.


Replace the cloths as they become dirty.

Always follow safety regulations. See page 1

1-4

5-7

Completed

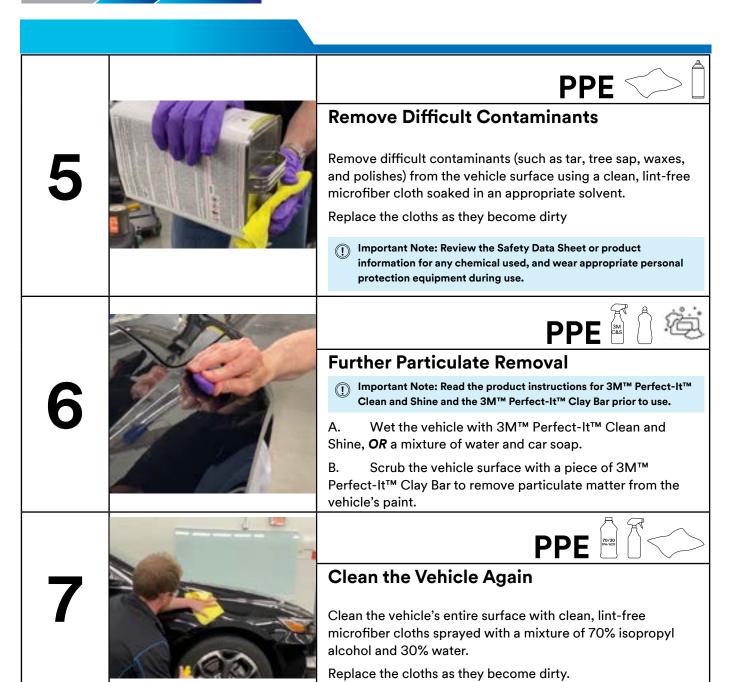



Always follow safety regulations. See page 1

Installation Day Cleaning

1 _ 4

Completed

Operating Steps 1 – 4


1



Dedicated Vehicle Cleaning Day

3M recommends a dedicated day (typically the day before any film installation) for comprehensive inspection and cleaning of the vehicle, and to allow the vehicle surface to return to ambient temperatures. This allows for proper preparation and for the vehicle to fully dry from after the cleaning process.

2

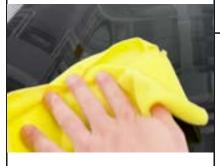

Clean individual panels prior to film installation.

PPE 70/30

Clean an individual panel immediately prior to installing film on that panel. Clean the panel using clean, lint-free microfiber cloths sprayed with a mixture of 70% isopropyl alcohol and 30% water.

Replace the cloths as they become dirty.

3



Install film over the cleaned panel.

Immediately after cleaning a panel, install film over that panel. The less time there is between cleaning and film installation the smoother and cleaner the installation will go. See <u>3M</u>
lnstruction Bulletin 5.36 for detailed instructions on installing film onto automobiles, vans, and buses.

4



Repeat

Repeat the cleaning process on each subsequent vehicle panel where film will be installed, immediately prior to installing film on that panel.


PPE

Always follow safety regulations. See page 1

Additional Prep Considerations

Operating Steps 1 - 4





Ground the vehicle to dissipate static electricity. This reduces the car's attraction of contaminants.



Install tire covers.

Install tire covers to further reduce contaminant transfer to exposed vehicle surfaces and film adhesives.



Vacuum

Vacuum the shop floor and the vehicle's interior to reduce dust transfer when opening and closing the vehicle's doors during film installation



Wet the Floor

Wet the shop floor with soapy water in order to keep dust on the floor during vehicle cleaning and film installation.

[] Important Note: Take care to avoid slipping on the wet floor.

Dust Mitigation Considerations



1-3 Completed

5

Avoid Sweeping

Sweeping the floor moves dust from the floor into the air. Do NOT sweep immediately prior to or during vehicle cleaning or film installation.

Important Documents

Product Bulletin 2080	Cleaning Video
FAQ 2080 Installation	3M Instruction Bulletin 5.36

For additional help with installation, please contact your local 3M Representative.

Warranty Information

Product Selection and Use

Many factors beyond 3M's control and uniquely within user's knowledge and control can affect the use and performance of a 3M product in a particular application. Customer is solely responsible for evaluating the product and determining whether it is appropriate and suitable for customer's application, including conducting a workplace hazard assessment, reviewing all applicable regulations and standards, and reviewing the product label and use instructions. Failure to properly evaluate, select, and use a 3M product in accordance with instructions or to meet all applicable safety regulations may result in injury, sickness, death, and/or harm to property.

Warranty, Limited Remedy, and Disclaimer

Unless a different warranty is specifically stated on the applicable 3M product packaging or product literature (in which case such warranty governs), 3M warrants that each 3M product meets the applicable 3M product specification at the time 3M ships the product. 3M MAKES NO OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OR CONDITION OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR ARISING OUT OF A COURSE OF DEALING, CUSTOM, OR USAGE OF TRADE. If a 3M product does not conform to this warranty, the sole and exclusive remedy is, at 3M's option, replacement of the 3M product or refund of the purchase price.

Limitation of Liability

Except for the limited remedy stated above, and except to the extent prohibited by law, 3M will not be liable for any loss or damage arising from or related to the 3M product, whether direct, indirect, special, incidental, or consequential (including, but not limited to, lost profits or business opportunity), regardless of the legal or equitable theory asserted, including, but not limited to, warranty, contract, negligence, or strict liability.



Phone: 1-800-328-3908

Commercial Branding and Transportation 3M Center, Building 223-3N-30 St. Paul, MN 55144 USA

Please Recycle.